

User Commands

Set/Unset System = User code

Omit zone/Part Set User code + 2 + Omit and/or 3 + Omit

Test Bells 4 + ENTER + User code

The system activates the internal sounder for three seconds, followed by the external sounder for three seconds.

Walk Test 5 + ENTER + User code

Key in User code to end test

Change User code 6 + ENTER + current user code new user code + ENTER